

Model	Rated Load (lbs)	Deflec. @ Rated Load (in)	Spring Rate (lbs/in)	Max. Combined Vert. / Horiz. G Rating	Spring Color
SRMF-2-352	280	1.5	187	36.9	Yellow
SRMF-2-354	500	1.5	333	20.7	Purple
SRMF-2-354-142	770	1.5	513	13.4	Purple/Blue
SRMF-2-356	900	1.5	600	11.5	Black
SRMF-2-356-142	1,170	1.5	780	8.8	Black/Blue
SRMF-2-356-176	1,500	1.5	1,000	6.9	Black/Black
SRMF-2-356-144	1,700	1.5	1,133	6.1	Black/Brown
SRMF-2-356-146	2,600	1.5	1,733	4.0	Black/Yellow
SRMF-2-356-148	3,150	1.25	2,520	3.3	Black/Green

Model	Rated Load (lbs)	Deflec. @ Rated Load (in)	Spring Rate (lbs/in)	Max. Combined Vert. / Horiz. G Rating	Spring Color
SRMF-2-350	160	2	80	64.6	Red
SRMF-2-350-140	320	2	160	32.3	Red/Black
SRMF-2-403	696	2	348	14.8	Black
SRMF-2-404	906	2	453	11.4	Blue
SRMF-2-405	1,180	2	590	8.8	Red
SRMF-2-406	1,352	2	676	7.6	Orange
SRMF-2-407	1,574	2	787	6.6	Green
SRMF-2-408	1,836	2	918	5.6	White
SRMF-2-409	2,000	2	1,000	5.2	Brown
SRMF-2-410	2,500	2	1,250	4.1	White
SRMF-2-407-150	2,874	2	1,437	3.6	Green/Grey
SRMF-2-409-150	3,300	2	1,650	3.1	Brown/Grey
SRMF-2-410-150	3,800	2	1,900	2.7	White/Grey

Notes:

- Standard finish: Housing - Zinc Bright Plating; Spring - Zinc Bright Plating (Color: see table); Hardware - Zinc-electroplate.
- Safety factor - Springs will accommodate 50% extra load from rated load to solid load.
- Vibrasystems isolators are tested and certified to ASHRAE 171-2017 for wind and seismic load resistance. Wind and Seismic Certification Compliance Report 1701502-CR-001.

Isolator Selections

Pos 1		Pos 2	
Pos 3		Pos 4	
Pos 5		Pos 6	
Pos 7		Pos 8	
Pos 9		Pos 10	

VibraSystems Inc

www.vibrasystems.com
email: info@vibrasystems.com

INSTALLATION INSTRUCTIONS

SCALE:	MODEL:		REV
None	SRMF-2-350	SHEET 1 OF 2	A


1. Check each isolator's model number ("A") against the information on the packing slip, before beginning installation.

2. Secure the isolator to the equipment support structure - concrete foundation or metal frame, according to the equipment base's drawings for the locations of the mounting holes ("B").

2.1. If the isolator is installed on a concrete foundation, use sets of seismically rated concrete anchors and follow the general anchor installation instructions with the required torque value on the anchor's nut.

2.2. If the isolator is installed on a metal base, use grade 5 or better hardware to secure the isolator to the support base. Welding to steel base is permitted provided the weld achieves the required strength. Remove the rubber pad ("P") before welding.

2.3. Vibrasystems Inc. recommends that all the isolators are installed on a level surface.

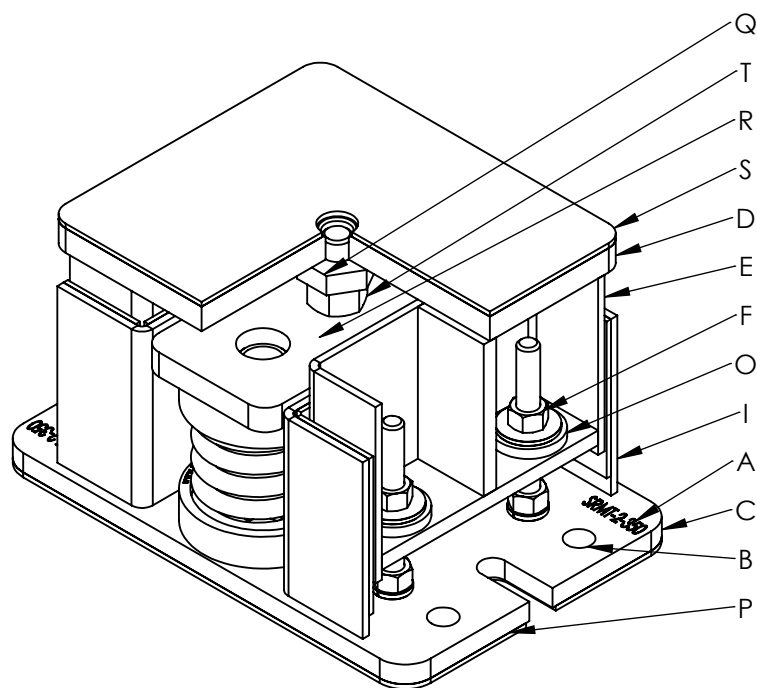

3. Use a forklift, crane or any other certified lifting machine to raise the equipment to be installed. Slowly lower the equipment on top of the isolators and make sure that the equipment's base is perfectly aligned with the isolator's top plate ("D").

4. Make sure that the flat tops ("D") of all isolators are properly secured to the equipment's base by bolting or welding the isolator's flat top plates ("D") to the equipment's base. Welding to steel base is permitted provided the weld achieves the required strength. Remove the rubber pad ("S") before welding.

5. When the equipment, which must be at the full operating weight, is placed onto the isolator, the isolator's spring will be compressed under the load according to the Load VS. Deflection chart for this isolator model. The inside channels ("E") will slide down along the outside channels ("I") of the isolator's base ("C") under the weight of the equipment.

6. Level each isolator in sequence by turning the leveling bolt ("Q") a full counterclockwise turn at a time. Repeat this procedure on all isolators, one at a time. After the leveling is done, run down the level lock nut ("T") to lock the leveled position by tightening it to the spring bearing plate ("R").

7. Adjust the lock nuts ("F") to allow a free movement of the installed equipment at all mounting points, with an allowed gap of 1/4" ("H") - see sheet 1 of 2. All side lock nuts ("F") have plastic inserts to prevent them from moving on the threaded rods ("O").

8. Installation is complete.

VibraSystems Inc

www.vibrasystems.com

email: info@vibrasystems.com

INSTALLATION INSTRUCTIONS

SCALE:	MODEL:		REV
None	SRMF-2-350	SHEET 2 OF 2	A